

Touch Screen Operations

To select a dictionary

- 1 Touch the Quick Palette [ホーム] (Home) button to display the Home screen.
- 2 Touch  (Menu).
- 3 Touch a category.
 - Touching a category selects it.
 - The currently selected category or dictionary will be indicated by a green cursor ( or ).
- 4 Touch a dictionary (icon).
 - This displays the initial screen of the dictionary.
 - Touching a dictionary that has a  indicator next to it displays a sub-list of dictionaries. Touch the dictionary you want to select.
 - If the menu screen has a [次ページへ] (Next page) or [前ページへ] (Previous page) icon, you can touch these icons to scroll between menu pages.

To select a headword or screen item

- 1 Enter characters. On the list that appears, touch the term or screen item you want.
 - This highlights the term or item.
- 2 Touch the highlighted term or item again.
 - This displays the definition or explanation in the case of a term, or the next screen in the case of a screen item.

Scrolling the Screen

Flicking the screen at high speed will scroll one screen, while touching and then swiping will scroll one line.

Assigning Often-used Dictionaries to the Home Screen

You can assign up to five often-used dictionaries to the Home screen for quick and easy recall whenever you need them.

To assign a dictionary to the Home screen

- 1 Press  to display the Home screen.
- 2 Touch  (Menu).
- 3 Touch and hold the dictionary you want to assign for about one second.
 - Dictionaries are displayed on the screen in the order they were assigned, from left to right. To change the arrangement of dictionaries, delete the ones currently registered and register them again.

To select a dictionary

- 1 While the Home screen is displayed, touch the dictionary you assigned to the Home screen.

To remove a dictionary

- 1 While the Home screen is displayed, touch and hold the dictionary you want to remove for about one second.
- 2 Use  and  to select a dictionary removal option, and then press .
 - To remove a single dictionary, select 選択中の登録を解除 (1件) (Remove selected (1)).
 - To remove all dictionaries you assigned, select 全ての登録を解除 (Remove all).

Launching a Search from the Home Screen

You can input hiragana, kanji or alpha characters to perform a Multi-Dictionary Search from the Home Screen.

- 1 Press  .
 - This displays the Home screen.
- 2 Touch the search method you want to use: 日本語 (Japanese), アルファベット (alpha character), 例文検索 (Example Search), 成句検索 (Phrase Search).



- This causes the cursor () to appear in the search term input box. As long as nothing is contained in the search term input box, you can touch and select a different search method, if you want.
- Touching  (Handwriting) displays the handwriting input cells. For information about handwriting input, see "Handwriting Input".
- Touching  (Soft Keyboard) displays the soft keyboard. For information about soft keyboard input, see "Inputting with the Soft Keyboard".
- Depending on your electronic dictionary model, you may be able to look up other language terms besides English.

- 3 Enter the term you want.
 - Terms starting with the characters you have entered appear in a list on the display. In the case of 例文検索 (Example Search) and 成句検索 (Phrase Search), enter the characters you want and then press .
 - Each term also includes an indicator showing its dictionary.
- 4 Use  and  to move the highlighting to a dictionary and term combination, and then press .

Launching a Search from a Dictionary

You can use any one of the five patterns shown below to search for terms and sentences.

- For details about the search patterns of each dictionary, see the 収録辞典 (Included Dictionaries) chapter in the 取扱説明書 (User's Guide) for your electronic dictionary.

[パターン 1] (Pattern 1): Entering the initial characters of the term you want to find

The displayed list of search results changes as you enter characters of the term you want to find. Example: To look up the meaning of "tale" (ジーニアス英和辞典)

- 1 Use  and  to highlight 見出し語検索 (Headword Search).
- 2 Enter the term you want.
 - As you enter each character, the list of terms is updated accordingly.
 - When entering a headword, you can use the following wildcard characters.

Character	Represents
?	A single unknown character
~	A series of multiple unknown characters of unknown length

- 3 Use  and  to move the highlighting to a term, and then press .
 - This displays the definition screen.

[パターン 2] (Pattern 2): Entering all of the terms you want to find

Enter the entire term you want to find and then press . Example: To find the phrases that use the words "get" and "to" (ジーニアス英和辞典)

- 1 Use  and  to highlight 成句検索 (Phrase Search).
 - Highlight 例文検索 (Example Search) to search for an example.
- 2 Enter the term.
 - When inputting multiple words, separate them using the ampersand character (&), not spaces. Example: get to ➔ get&to

- 3 Press .
 - This displays a list of all phrases that contain the terms.
- 4 Use  and  to move the highlighting to a phrase, and then press .
 - This displays the detailed information screen.

[パターン 3] (Pattern 3): Searching step-by-step through a series of titles

With some dictionaries, you need to perform successive select and execute (by pressing ) operations until you arrive at the information you need. Example: To look up information about a world heritage site (ブリタニカ国際大百科事典)

After displaying theブリタニカ国際大百科事典 initial screen, touch the following items on the screen: 分類から探す (Category Search) → [C] 世界遺産 (World Heritage Sites) → [B] アフリカ地域 (Africa) → [C] エジプト (Egypt). This will display a screen of detailed information about Egypt.

[パターン 4] (Pattern 4): Narrowing down the search using multiple conditions

With this type of search, you can input multiple keywords, terms, or other conditions. Example: To look up the kanji 志 in 新漢語林 (Japanese Kanji Dictionary)

- The kanji 志 has the radical 心 (こころ), and a total of 7 strokes. This information can be used to look up the kanji.

- 1 Highlight  単漢字を読み/画数から探す (Single Kanji Reading/Number of Stroke Search) and then press .
 - If a selection item has a letter at the beginning, you can press the corresponding letter key to execute the selection directly. In case of the above, for example, you could simply press .

- 2 Use , , , and  to highlight the部首読み (Radical Reading), input 心 (heart), and then press .
 - This displays a list of applicable radicals.
- 3 Use , , , and  to highlight 心, and then press .
 - This displays a list of applicable radicals.
- 4 Use , , , and  to highlight 総画数 (Total Strokes), and then enter 7.
 - Use the number keys that appear on the screen to input a number.

- 5 Press .
 - This displays a list of kanji characters that satisfy the conditions.
- 6 Use , , , and  to highlight 志, and then press .
 - This displays an explanation of the term.

[パターン 5] (Pattern 5): Touching a screen item

You can perform a search simply by touching some screen items with the stylus. Example: To look up ナスカ (ブリタニカ国際大百科事典)

- After displaying theブリタニカ国際大百科事典 initial screen, touch the following items on the screen: 地図から検索 (Map Search) (twice) → おもな世界遺産 (Main World Heritage Sites) (twice) → 「南アメリカ」 (South America) → ナスカ (Nazca)
- This will display an explanation mini window.
 - Press  or touch the Quick Palette [解説へ] (Show Explanation) icon for a full screen view of the explanation.

- The number of times an item needs to be touched before a mini window appears depends on the headword.

Other Searches

Jump Search

You can use jump search to jump to another location in the same dictionary or to another dictionary.

To jump within the same dictionary

- 1 When search results show items with a large arrow () or small arrow () jump indicator, press .
 -  appears and the first character that is the jump target is highlighted.
 - The highlighted jump target is one character for Japanese and a word for English.

- 2 Use the arrow keys to move the highlighting to an item to the right of a jump indicator ( or ) and then press  to jump.
 - Instead of the above procedure, you also can perform the jump by touching the term to the right of the arrow indicator.
 - For some dictionaries only red text is displayed without  or .

To jump to another dictionary

Example: To look up "話" from the "tale" definition screen by jumping from ジーニアス英和辞典 (English-Japanese Dictionary) to 明鏡国語辞典 (Japanese Dictionary)

- 1 While the results of a search are displayed, press .
 - This displays the dictionary menu screen.
- 2 Use the arrow keys to move the highlighting to the term you want to look up, and then touch the Quick Palette [選択] (Select) icon.
 - This displays the dictionary menu screen.

- 3 Use  and  to highlight a dictionary, and then press .
 - This displays a list of candidates.

- 4 Use  and  to move the highlighting to the item you want, and then press .
 - After pressing  in step 1, tapping a single character or term or dragging the stylus across multiple characters or terms will search for the headwords that match the highlighted character(s) or word(s). If you highlight multiple English words for an Example Search or Phrase Search jump, only the first words you highlight will be searched for.
 - If  or an English term is shown on the jump destination screen, you can play native speaker pronunciation. For details, see "Native Speaker Pronunciation".

Mini Dictionary

You can use the Mini Dictionary to display a mini window and look up an English or Japanese term on a definition screen without leaving the definition screen.

- The Mini Dictionary uses partial extractions of 明鏡国語辞典 (Japanese Dictionary) or ジーニアス英和辞典 (English-Japanese Dictionary) content.

- 1 While a search result screen is displayed, press .
 - This will play the pronunciation of the term or example sentence next to or under , or of the currently highlighted English term.
 - If there are multiple  indicators or English terms, use the arrow keys to highlight the one you want and then press .
- 2 To exit pronunciation, press .
 - You also can play a pronunciation by touching .
 - Note the following precautions concerning English terms.
 - Proper pronunciation will not be produced for language other than English.

- While the Mini Dictionary is displayed, tapping a single character or term or dragging the stylus across multiple characters or terms on the screen will search the Mini Dictionary for the headwords that match the highlighted character(s) or word(s).
- To close the Mini Dictionary mini window, press  or touch the mini window's  button.

Displaying Detailed Information

Use the operations described here to view detailed explanations and other information about looked up words and terms.

Viewing Phrases, Compound Expressions, and Compound Terms

If 成・複 (or 成句・複合語) or 熟語 is on the screen, it indicates that there is phrase, compound expression, or compound term information available for the term you are viewing.

- 1 Touch the on-screen icon.
 - This displays a list of applicable candidates.
 - You can also display a list of candidates by touching the Quick Palette [成句複合語] (Phrases/Compound Expressions) icon or [熟語] (Compound Terms) icon.
- 2 Touch the item you want to view to highlight it and then press .
 - This displays the applicable details.

Viewing Examples and Explanations

If 用例 or 解説 is on the display, it means that example, illustration, explanation, or other information is available.

- 1 Touch an on-screen icon.
 - This displays the applicable details.

Pronunciation

You can use your electronic dictionary to listen to readings (using native speaker pronunciations or synthesized voices) of terms and sentences you look up, and to record your own reading and compare it with built-in readings by a native speaker.

- The pronunciation sounds from a built-in speaker.

Native Speaker Pronunciation

When  or an English term is on the display, it means that native speaker pronunciation (TRUE VOICE®) is available.

- 1 Press .
 - This will play the pronunciation of the term or example sentence next to or under , or of the currently highlighted English term.
 - You can specify the number of repeats by pressing the [回数] (Repeat) icon on the Quick Palette and then selecting the number of repeats you want: 1回 (1), 3回 (3), 5回 (5).
- 2 Press .
 - This will play the pronunciation of the term or example sentence next to or under , or of the currently highlighted English term.
 - If there are multiple  indicators or English terms, use the arrow keys to highlight the one you want and then press .

- 4 To exit pronunciation, press .
 - You also can play a pronunciation by touching .
 - Note the following precautions concerning English terms.
 - Proper pronunciation will not be produced for language other than English.

- The pronunciation produced by the electronic dictionary may not be correct if there is more than one pronunciation for a term.

Recording Your Reading to Compare with Native Speaker Reading

While  or an English term is displayed, you can compare your reading with a native speaker reading.

- 1 Press .
 - This causes  or an English term to become highlighted.
 - If there are multiple  indicators or available English terms on the display, use the arrow keys to move the highlighting to location of the indicator or term you want to use for pronunciation comparison.

- 3 Press  to play the native speaker reading of the term.
 - The native speaker reading and the reading you recorded will play back in succession.
 - To stop playback, press .
 - If you want to play them back again, repeat step 5 of this procedure.
 - To re-record pronunciation, select もう一度録音 (Record again) and perform the procedure from step 3.

- 4 After playback is complete and 録音中 (Recording) appears on the screen, read the same term or sentence into the microphone.
 - After you finish recording, press .
 - Recording time is one minute. Recording stops automatically after one minute.

- 5 Use  and  to highlight 収録音声と聞き比べ (Compare with built-in reading), and then press .
 - The native speaker reading and the reading you recorded will play back in succession.
 - To stop playback, press .
 - If you want to play them back again, repeat step 5 of this procedure.
 - To re-record pronunciation, select もう一度録音 (Record again) and perform the procedure from step 3.

- 6 Use  and  to highlight 聞き比べを終了 (Exit comparison), and then press .
 - Exiting a comparison operation will automatically delete the reading you recorded.
 - Pressing  returns to the definition screen.

Synthesized Voice Readings

Synthesized voice readings of terms and examples are available in seven languages: English, Spanish, German, French, Italian, Chinese, and Korean.

- Some dictionaries/modes do not support synthesized voice readings.
- Chinese reading can be selected for a Chinese model electronic dictionary and Korean for a Korean model electronic dictionary only. For other models, these languages can be selected after the applicable optional content is installed.
- Pronunciation is not available for pinyin and alphabetic notation Chinese, and for some kanji.
- For Korean, only hangul terms can be read.

- 1 While a definition or explanation screen is displayed, press .
 - This will play the pronunciation of the term or example on the screen for which a pronunciation is available will be highlighted.

- 2 On the Quick Palette, touch the [読み上げ] (Read) icon.
 - The first term or example on the screen for which a pronunciation is available will be highlighted.

- 3 Use  and  to highlight the term or example whose pronunciation you want to hear.
 - You can also highlight a term or example by touching it.

- 4 Press .
 - This will play the pronunciation of the term or example.

- 5 To exit pronunciation, press .

- enloop is a registered trademark of Panasonic Group.
- EVOLTA is a registered trademark of Panasonic Corporation.